

FLAT-PAK®

The **FLAT-PAK®** sticker machine is available in 7 colors and features two columns, each having a 300-card capacity. It is the only 2 column flat vending machine that uses the Beaver NG rotary coin mechanisms. For added security, the FLAT-PAK incorporates the Tamper Guard System®, a specially designed die cast plate that prevents damaging articles from entering the dispensing slot and damaging inner components as well as dispensing stickers for free. This machine also features a dual locking system, allowing access to the product area without necessarily allowing access to the cash box. Loading the Flat-Pak is easy as stickers do not have to be sorted to all face one way. Stickers can simply be placed in the machine. A large product display panel, a high capacity cash box and two Beaver New Generation Coin Mechanisms that are adaptable for currencies in over 100 countries, are additional standard qualities of the FLAT-PAK.



Standard Features and Benefits

Panels: Sliding for faster product changes

Coin Mechanism: New Generation, triple chrome plated, all metal, 25 cent coin mechanism handling 1 - 4 coins, featuring a slug diverter and clutch handle

Metal Parts: Triple chrome plated lid, tamper guard and coin mechanisms. Powder coat base, front and side panels, top ring, hopper and anodized aluminum corner posts

Body: Powder coated die cast metal panels with choice of 7 great colors

Lock and Key: Lower tubular and upper flat lock and key geographically assigned for your security

Decal: Globe decal in USA, Canadian or Euro currency


Display: Encased sticker display

Cash box: Separate cash box

Mounting Hardware: Scuff-proof plastic feet & quick change mounting plate with screws

COLOR CODE OPTIONS

A2	Circus Red
A4	Black
A5	Arctic White
A7	Sky Blue
A8	Navy Blue
A10	Canary Yellow
B3	Hunter Green

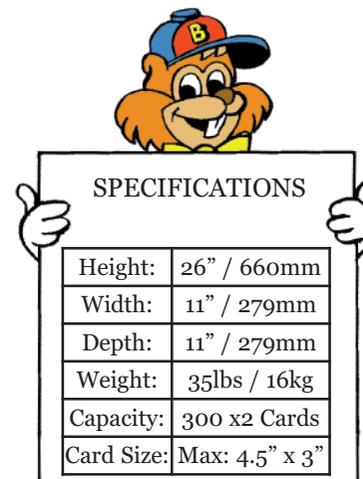

Flat-Pak

FLAT-PAK®



Flat-Pak

on
BS250 A-29



Flat-Pak

on
BS150 Stand




Flat-Pak

on
BS800 D-33



Service Steps:

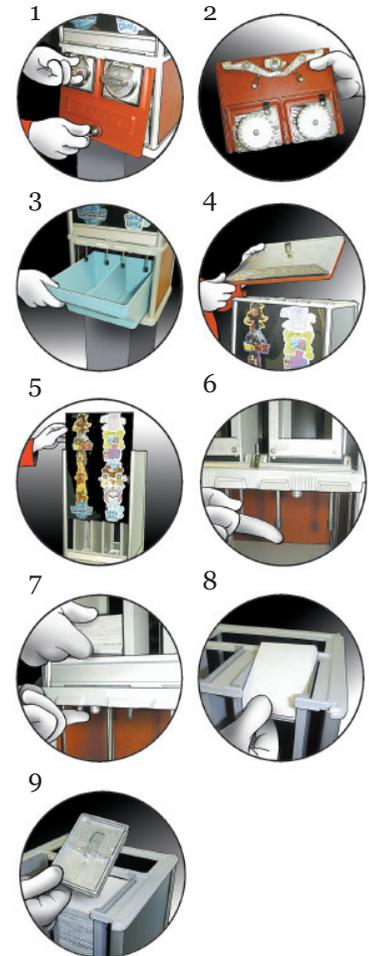

Flat-Pak Service Steps:

1. Unlock lower panel
2. Place to side
3. Pull out cash tray
4. Remove top lid
5. Slide out front panels
6. Push up card lifter rods
7. Remove unused cards
8. Place in new cards
9. Place weight on top of last card